Choosing the correct kit.

When fitting the fan kit, it is desirable to have approximately 50% to 80% (70% is optimum) of the fan blade inside the fan shroud.
We offer two kits with either 32mm or 42.5mm adapters to achieve as close to the percentages required as possible.
As the shroud thickness varies depending on the model of the vehicle. We ask you to take a measurement so the most suitable kit can be supplied.
There are two easy methods to take this measurement. But use your preferred method as required.

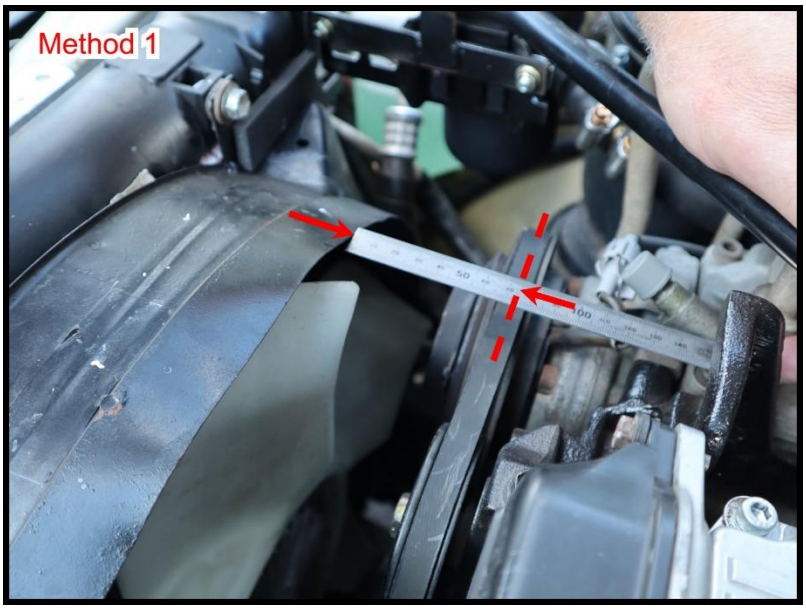


Method 1 - If your vehicle has an air-conditioner, measure from the back edge of the fan shroud to the centre of the belt.

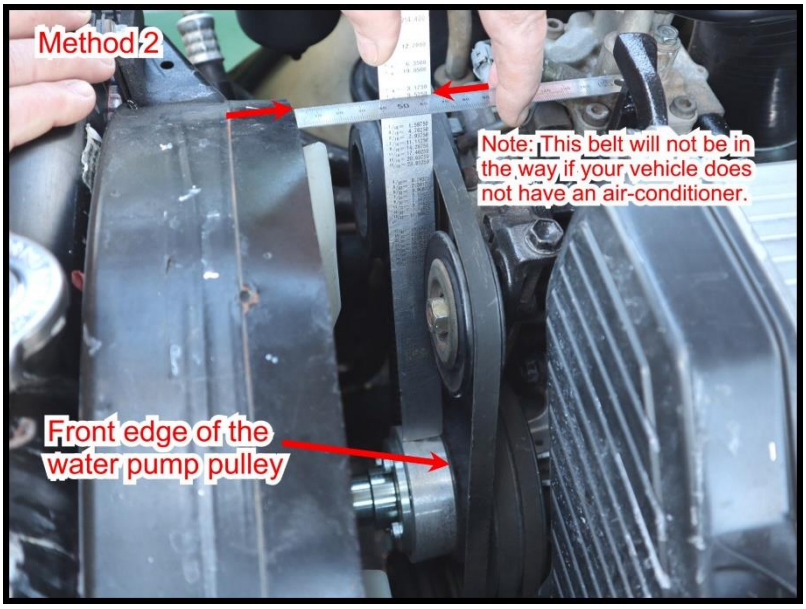


Method 2 - If your vehicle does not have an air-conditioner, measure from the front edge of the water pump pulley to the back edge of the fan shroud. (The end of a large steel ruler can be positioned at the front edge of the water pump pulley. And a small ruler can be used to measure to the edge of the ruler)

If you measure UNDER 85mm, please select the kit with 32mm adapter – P/N **EMPTO330B**
If you measure OVER 85mm, please select the kit with 42.5mm adapter – P/N **EMPTO330C**